




# Jomo247 Asset Repair Process

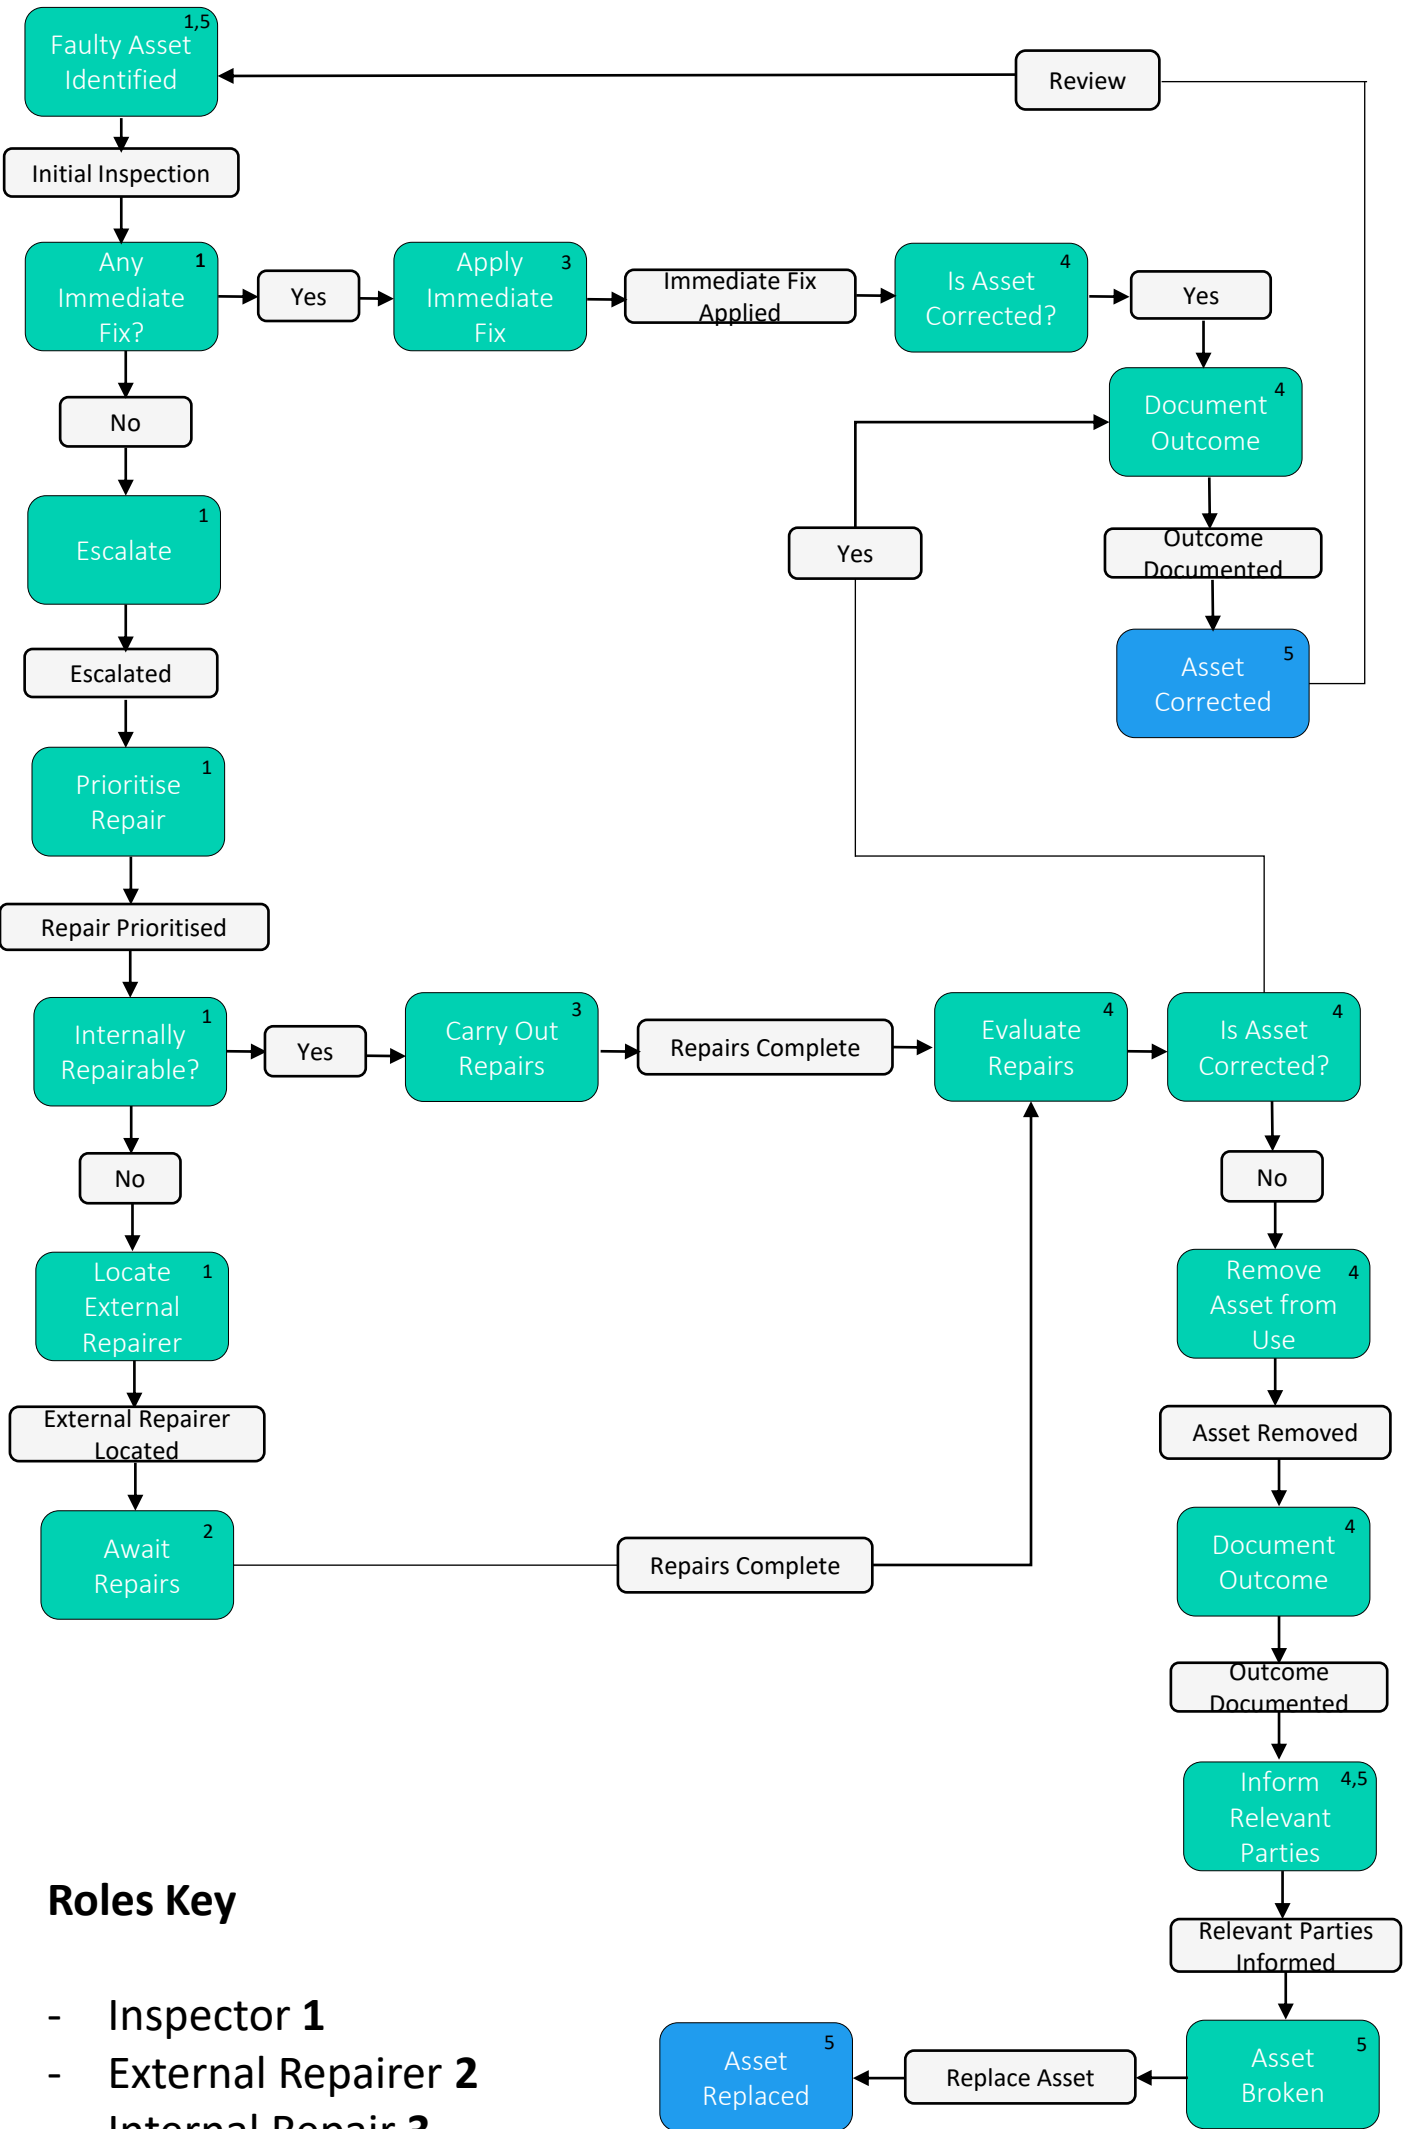

## Roles Key

- Inspector 1
- External Repairer 2
- Internal Repair 3
- Tester 4
- Asset Owner 5